

SMS working command (Arian Kelid Pars)

Function	SMS command (send)	SMS FEED BACK (receive or action)
GPS position	123456#0#0#	GPS Longitude::____, Latitude:____; example: GPS Longitude:11330.8308,E E=east; W= west Latitude: 2215.5708,N N=North; S=south
System Start Working	123456#1#1#	THE SYSTEM STARTS TO WORK
System Stop Working	123456#1#0#	THE SYSTEM STOP WORK
Start RSU external lamp flashing	123456#3#1#	START FLASHING
Stop RSUexternal lamp flashing	123456#3#0#	STOP FOR FLASHING
Check working status	123456#30##	SYSTEM IS IN NORMAL WORKING CONDITION
Checking current (phase A, phase B, phase C)	123456#4#1#	CURRENT LINE A: _A_ ; LINE B:_A_ ; LINE C:
Checking Line temperature (phase A, phase B, phase C)	123456#4#2#	TEMP LINE A:_A_ ; LINE B:_A_ ; LINE C:
Checking controller Battery	123456#4#3#	BATTERY CONTROLLER,_V_.(FULL VOLTAGE:6.8V)
Checking indicator battery	123456#4#4#	BATTERY LINE A:_V, LINE B:_V, LINE C:_V_.(FULL VOLTAGE:3.6V)
Change password	123456#31#newpassword#	PASSWORD IS CHANGED
Check all registered phone numbers	123456#50##	AUTHORIZED TELEPHONE NUMBER IS
1st phone registration	123456#501#1st phone#	AUTHORIZED TELEPHONE NUMBER SET SUCCESSFULLY
2nd phone registration	123456#502#2nd phone#	
3rd phone registration	123456#503#3rd phone#	
4th phone registration	123456#504#4th phone#	
5th phone registration	123456#505#5th phone#	
6th phone registration	123456#506#6th phone#	
7th phone registration	123456#507#7th phone#	
8th phone registration	123456#508#8th phone#	
9th phone registration	123456#509#9th phone#	
10th phone registration	123456#510#10th phone#	
Edit phase A indicator message	123456#81#message A phase Trip#	A PHASE TRIP. (NOTE: USER CAN EDIT MESSAGE)
Edit phase B indicator message	123456#82#message B phase Trip#	B PHASE TRIP
Edit phase C indicator message	123456#83#message C phase Trip#	C PHASE TRIP
Controller Power Alarming message (when battery voltage<5.8V)	Power Failure	Power Faiure(voltage<5.8V)
	Power Recovery	POWER RECOVERY
Fault Indicator Alarming message (when FI battery voltage<1.6V)	Power Failure	FI A power failure
	Power Recovery	FI A power recover
	Power Failure	FI B power failure
	Power Recovery	FI B power recover
	Power Failure	FI Cpower failure
	Power Recovery	FI C power recover
Earth Fault Alarming message		A Earth fault Possible
		B Earth fault Possible
		C Earth fault Possible
Temporary Fault Alarming message		A Temporary Fault
		B Temporary Fault
		C Temporary Fault